

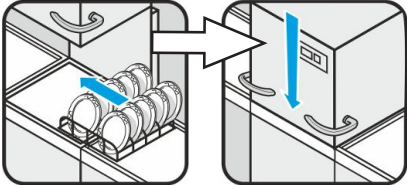
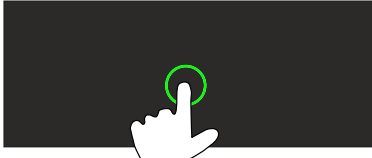
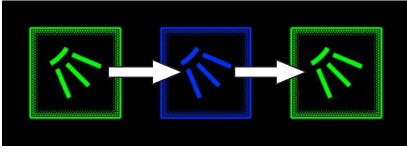
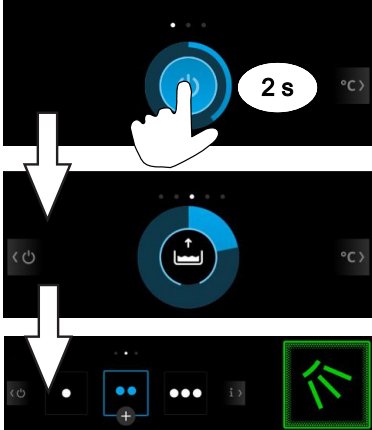
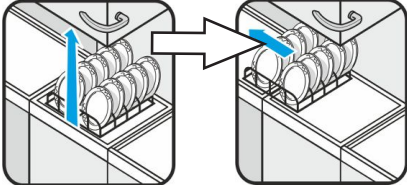
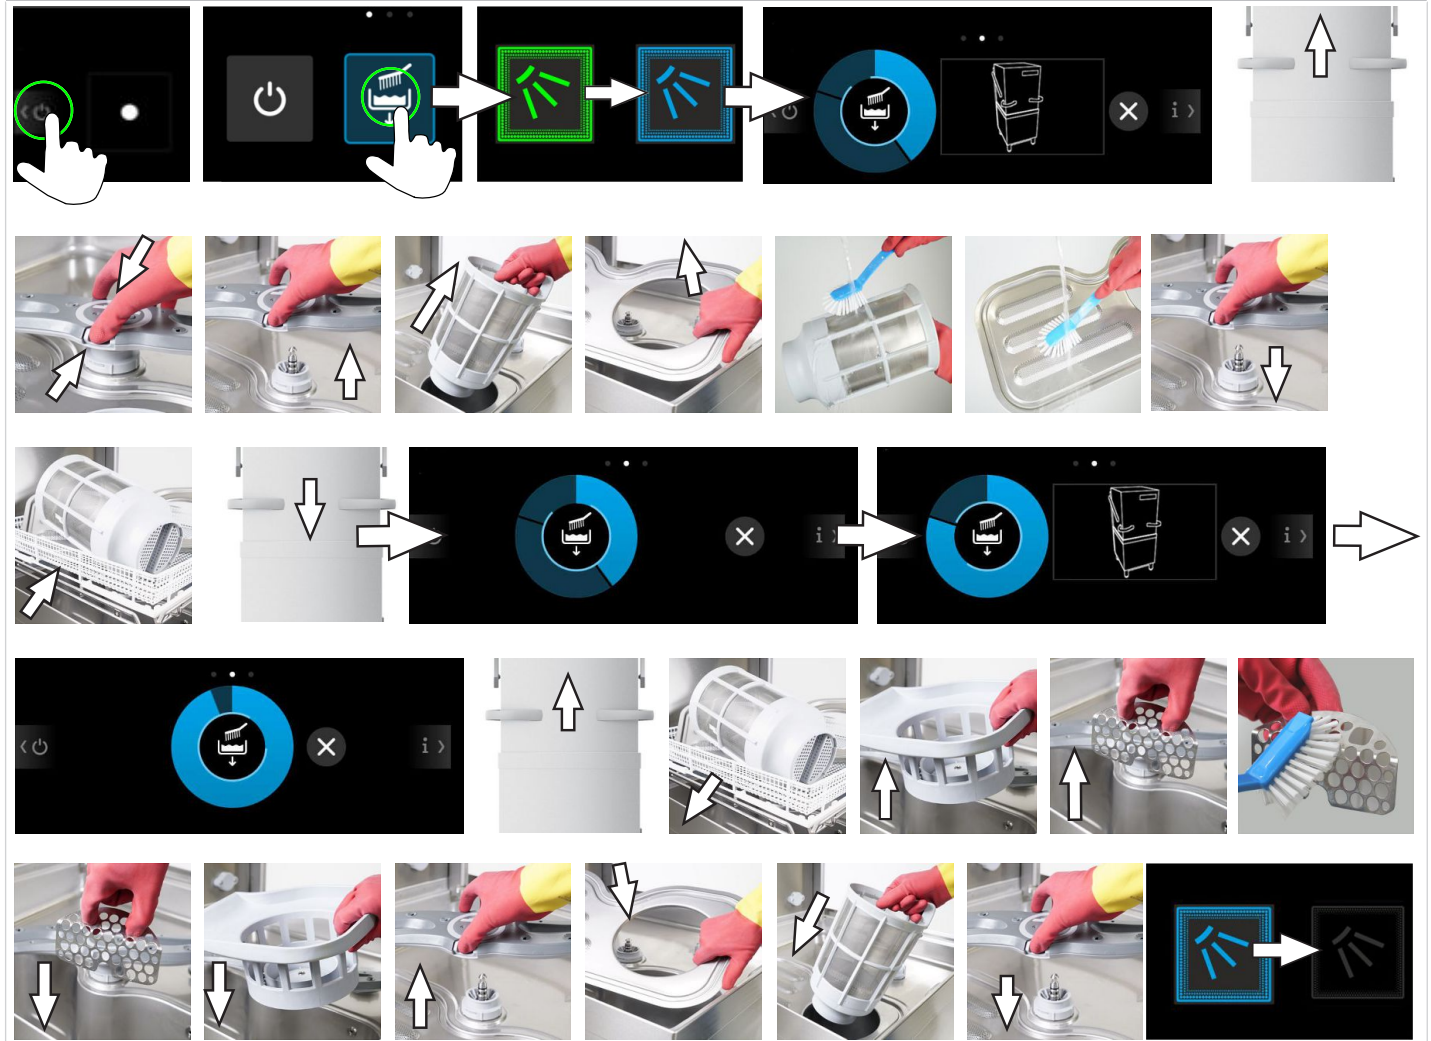


PT Series	Vaatwasmachine inschakelen	Wassen
	<p>1</p> 	<p>1</p> 
	<p>2</p> 	<p>2</p> 
	<p>3</p> 	<p>3</p> 

Vaatwasmachine uitschakelen en reinigen



The sequence of images illustrates the following steps:

- Touching the power button on the control panel.
- Pressing the fan icon on the control panel.
- Pressing the start button for 2 seconds to stop the cycle.
- Opening the dishwasher door.
- Removing the upper cutlery tray.
- Removing the lower cutlery tray.
- Removing the filter and cleaning it with a brush.
- Cleaning the spray arm.
- Cleaning the door gasket.
- Reinstalling the filter and spray arm.
- Reinstalling the cutlery trays.
- Pressing the fan icon on the control panel.

Bovenste en onderste wasveld reinigen




Bovenste en onderste wasveldlager reinigen




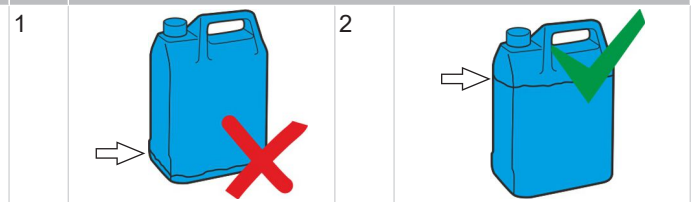
 Zout aanvullen



 Reservoir met reinigingsmiddel vervangen



 Reservoir naglansmiddel vervangen



Meer informatie: zie gebruiksaanwijzing
www.winterhalter.com/download-centre