





1 – Start, with ON/OFF button

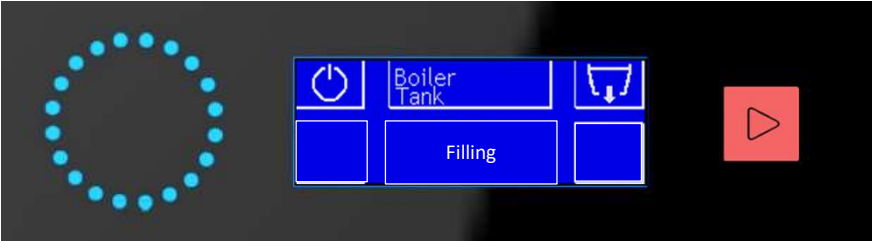


2 - Filling time




3 - Heating time

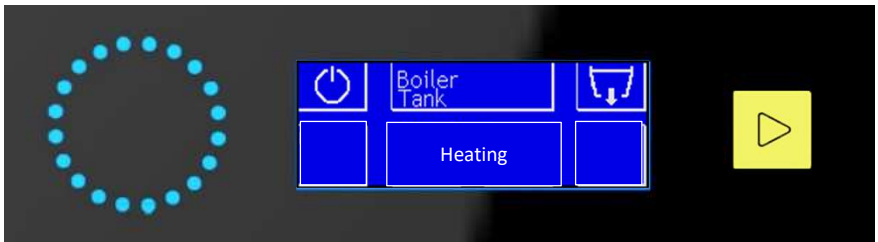


4 - Ready for program selection

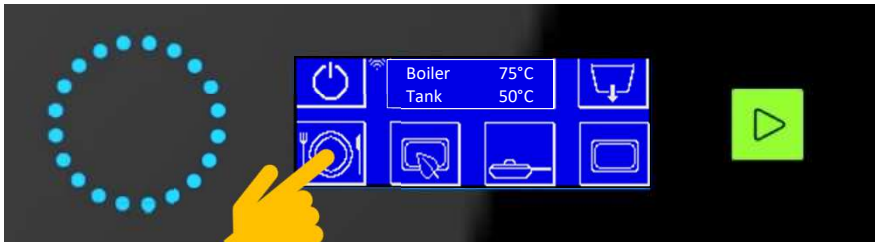

5 - Program selected

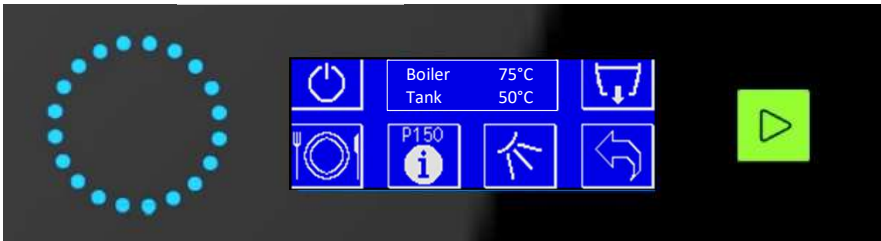



6 - Start washing

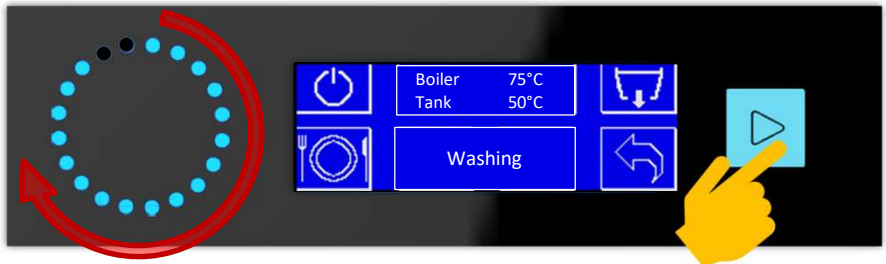

RAPID GUIDE

Drain and End Service

Turn the machine in stand-by with ON/OFF button.

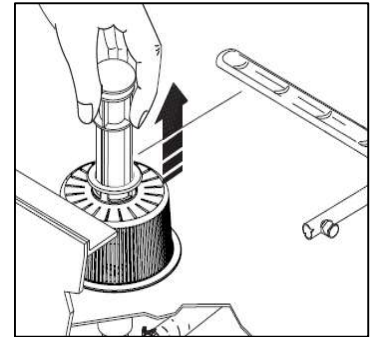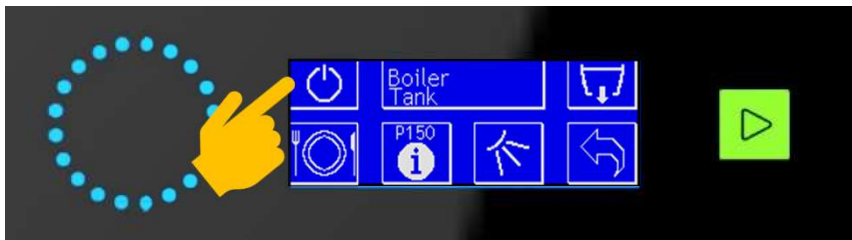

Open the door and remove the drainpipe


Without drain pump:

Briefly tap the ON/OFF button to switch the dishwasher off.



With built-in drain pump:

Briefly tap the ON/OFF button to switch the dishwasher off.
Press and hold the drainage button to activate the Autoclean.

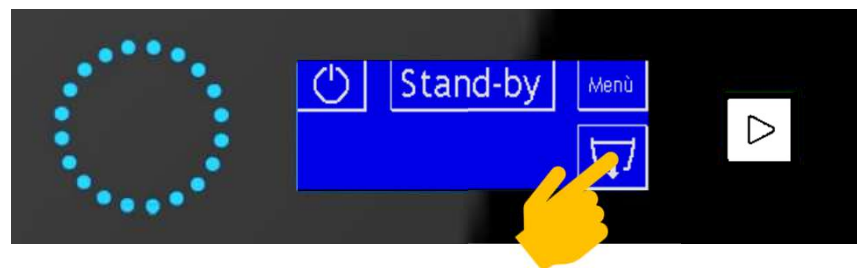

Please note: As soon as the water drains out from the tank, the autoclean cycle will start automatically and then the glass/dishwasher will switch off.

Cleaning the filters: see the following pictures
(to reinstall the filters follow the instructions in reverse order)

